

Energizer®

RECHARGEABLE®



Best used with Energizer® NiMH batteries

Thank You for Choosing the Energizer® Value Charger

Please read this manual before you use the charger, and save it for reference.

Batteries: Nickel Metal Hydride (NiMH) Rechargeable batteries

Sizes: AA and AAA

Recommended: Energizer® NiMH Batteries

CHARGING

1. Load Batteries into Charger

- Insert batteries to match the polarity marks (+ and -).

Note: When charging only 2 batteries, place batteries in the two positions to the left or right. Both AA and AAA size batteries can be charged at the same time.



2. Plug in the Charger

- Plug charger into a standard AC outlet.



3. Charge



LED lights glow **green** when charger is plugged in and batteries are properly inserted.

- Remove the batteries after recommended charge time.

4. Store

- Unplug the charger from the AC outlet.

CHARGING TIMES

Battery Size (NiMH)	Rated Capacity (mAh)	Estimated Charging Time
AA	2650	15 hr
AA	2300	13 hr
AA	2000	11 hr
AAA	850	10 hr

Note: Remove batteries when charging time is complete. When not in use, do not keep batteries in charger.

FEATURES

- Charges 2 or 4 NiMH AA's or AAA's at a time.
- Fold-out plug for compact storage.

SPECIFICATIONS

Model: CHVC3
Charges: AA NiMH batteries up to 2650mAh
 AAA NiMH batteries up to 1000mAh
Input Voltage: 110-127V 50/60 Hz
Charging Current: 170-200 mA for 2AA and 80-100 mA for 2AAA

WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- This charger is intended to be in a vertical or floor mount position.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Unplug before attempting maintenance or cleaning.
- For use in other countries beyond USA, attach the proper plug adapter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

LIFETIME LIMITED WARRANTY

Lifetime Limited Warranty: Warranty covers any defect in material or workmanship. It excludes damage caused by normal wear and tear, misuse, modification. Warranty lasts for as long as the original United States or Canadian purchaser owns this Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries. Warranty terminates if you sell or transfer them. Energizer will repair or replace them at its option. Call 1-800-383-7323 for warranty service. Warranty is limited to consumer use. EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.

Questions? Visit www.energizer.com

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.
 UPN-126193 ©2009 Energizer

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS. DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.