

# Energizer®

## RECHARGEABLE®

### Thank You for Choosing the Energizer® Family Charger

Please read this manual before you use the charger, and save it for reference.

**Batteries:** Nickel Metal Hydride (NiMH) Rechargeable batteries

**Sizes:** AA, AAA, C, D, 9V

**Recommended:** Energizer® NiMH Batteries

### CHARGING

#### 1. Load Batteries into Charger

- Open lid and place batteries in charger, matching the polarity marks (+ and -).



- Close the lid, which moves the charger contacts into place for charging.

#### 2. Plug transformer into a standard AC outlet.



Best used with Energizer® NiMH batteries

### 3. Charge

CHARGING	DONE	BAD
Battery icons blinking, adding bars over time.	Battery icon changed to solid color battery.	Outlined blinking battery icon.

- Unplug charger when charging is complete. (Safety Feature: Power to contacts is disabled when lid is opened.)

### CHARGING TIMES

Battery Size (NiMH)	Rated Capacity (mAh)	Number of Batteries	Estimated Charging Time
AA	2000	1-4*	2 hr
	2000	5-8	4 hr
	2300	1-4*	3 hr
	2300	5-8	5 hr
	2650	1-4*	3 hr
AAA	850	1-4	2 hr
	2500	1-2	3 hr
C, D	2500	3-4	5 hr
	175	1-2	6 hr

\*When using two bays only.

### SPECIFICATIONS

**Model:** CHFC  
**Charges:** 2 or 4 AA NiMH batteries up to 2650mAh  
 2 or 4 AAA NiMH batteries up to 1000mAh  
 2 or 4 C, D NiMH batteries up to 2500mAh  
 1 or 2 9V NiMH batteries up to 175mAh

**Input Voltage:** 100-240V AC  
**Charging Current:** 1/2pcs 9V: 30mA  
 2/4pcs AA: 1100mA; 6/8pcs AA: 550mA  
 1/2pcs C/D/AA: 1100mA; 3/4pcs C/D/AA: 550mA  
 2/4/6/8pcs AAA: 450mA; 1/2/3/4pcs AAA: 450mA

### WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Unplug before attempting maintenance or cleaning.
- For use in other countries beyond USA, attach the proper plug adapter.
- This charger is not a toy and should not be used by children or infirmed persons without adequate training or supervision.

### LIFETIME LIMITED WARRANTY

Lifetime Limited Warranty: Warranty covers any defect in material or workmanship. It excludes damage caused by normal wear and tear, misuse, modification. Warranty lasts for as long as the original United States or Canadian purchaser owns this Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries. Warranty terminates if you sell or transfer them. Energizer will repair or replace them at its option. Call 1-800-383-7323 for warranty service. Warranty is limited to consumer use. EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.

#### Questions? Visit [www.energizer.com](http://www.energizer.com)

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.  
 UPN-126192

IMPORTANT SAFETY INSTRUCTIONS -  
 SAVE THESE INSTRUCTIONS. DANGER  
 - TO REDUCE THE RISK OF FIRE OR  
 ELECTRIC SHOCK, CAREFULLY  
 FOLLOW THESE INSTRUCTIONS.

©2008 Energizer