

Thank You for Choosing the Energizer® Compact Charger

Please read this manual before you use the charger, and save it for reference.

Batteries: Nickel Metal Hydride (NiMH) Rechargeable batteries


Sizes: AA and AAA

Recommended: Energizer® NiMH Batteries


CHARGING

1. Load Batteries into Charger

- Slide open the battery charger.
- Set to AA or AAA. (Flip lever *down* for AAA).
- Insert batteries to match the polarity marks (+ and -).

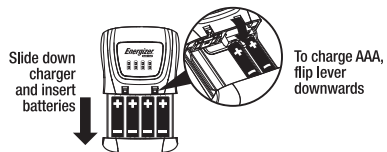

- If charging 2 batteries only, place them together on the left or right side.

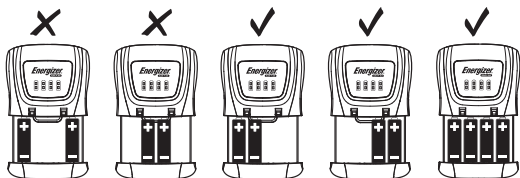

2. Plug in the Charger

- Lift the prongs of the AC plug until the plug snaps into place.
- Plug the charger into a standard AC outlet.

3. Charge

CHARGING	DONE	BAD
Battery icons blinking, adding bars over time.	Battery icon changed to solid color battery.	Rapid blinking of both bars in the battery icon.

4. Store

- Unplug the charger from the AC outlet and return the prongs to their closed position.
- Slide the charger closed.

CHARGING TIMES

Battery Size (NiMH)	Rated Capacity (mAh)	*Estimated Charging Time
AA	1300-2000	2-3 hr
AA	2100-2450	4 hr
AAA	850-900	2 hr

Note: Batteries will *not* be damaged if left in the charger for a longer time.
*per ANSI

FEATURES

- Ultra Compact Design fits in pocket or drawer perfect for in home or on the go usage.
- Easy to read battery icon.
- Universal voltage: 100-240VAC 50/60 Hz
- Primary (disposable) and bad battery detection.

SPECIFICATIONS

Model:	CHDC8
Charges:	AA NiMH batteries up to 2450mAh AAA NiMH batteries up to 900mAh
Input Voltage:	100-240V AC
Charging Current:	700mA for 2 or 4 AA/AAA

WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- This charger is intended to be in a vertical or floor mount position.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Unplug before attempting maintenance or cleaning.
- For use in other countries beyond USA, attach the proper plug adapter.

LIFETIME LIMITED WARRANTY

Lifetime Limited Warranty: Warranty covers any defect in material or workmanship. It excludes damage caused by normal wear and tear, misuse, modification. Warranty lasts for as long as the original United States or Canadian purchaser owns this Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries. Warranty terminates if you sell or transfer them. Energizer will repair or replace them at its option. Call 1-800-383-7323 for warranty service. Warranty is limited to consumer use, EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.

Questions? Visit www.energizer.com

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.
UPN-123697



IMPORTANT SAFETY INSTRUCTIONS -
SAVE THESE INSTRUCTIONS. DANGER
- TO REDUCE THE RISK OF FIRE OR
ELECTRIC SHOCK, CAREFULLY
FOLLOW THESE INSTRUCTIONS.